

Dentalzone

concret

ceiling

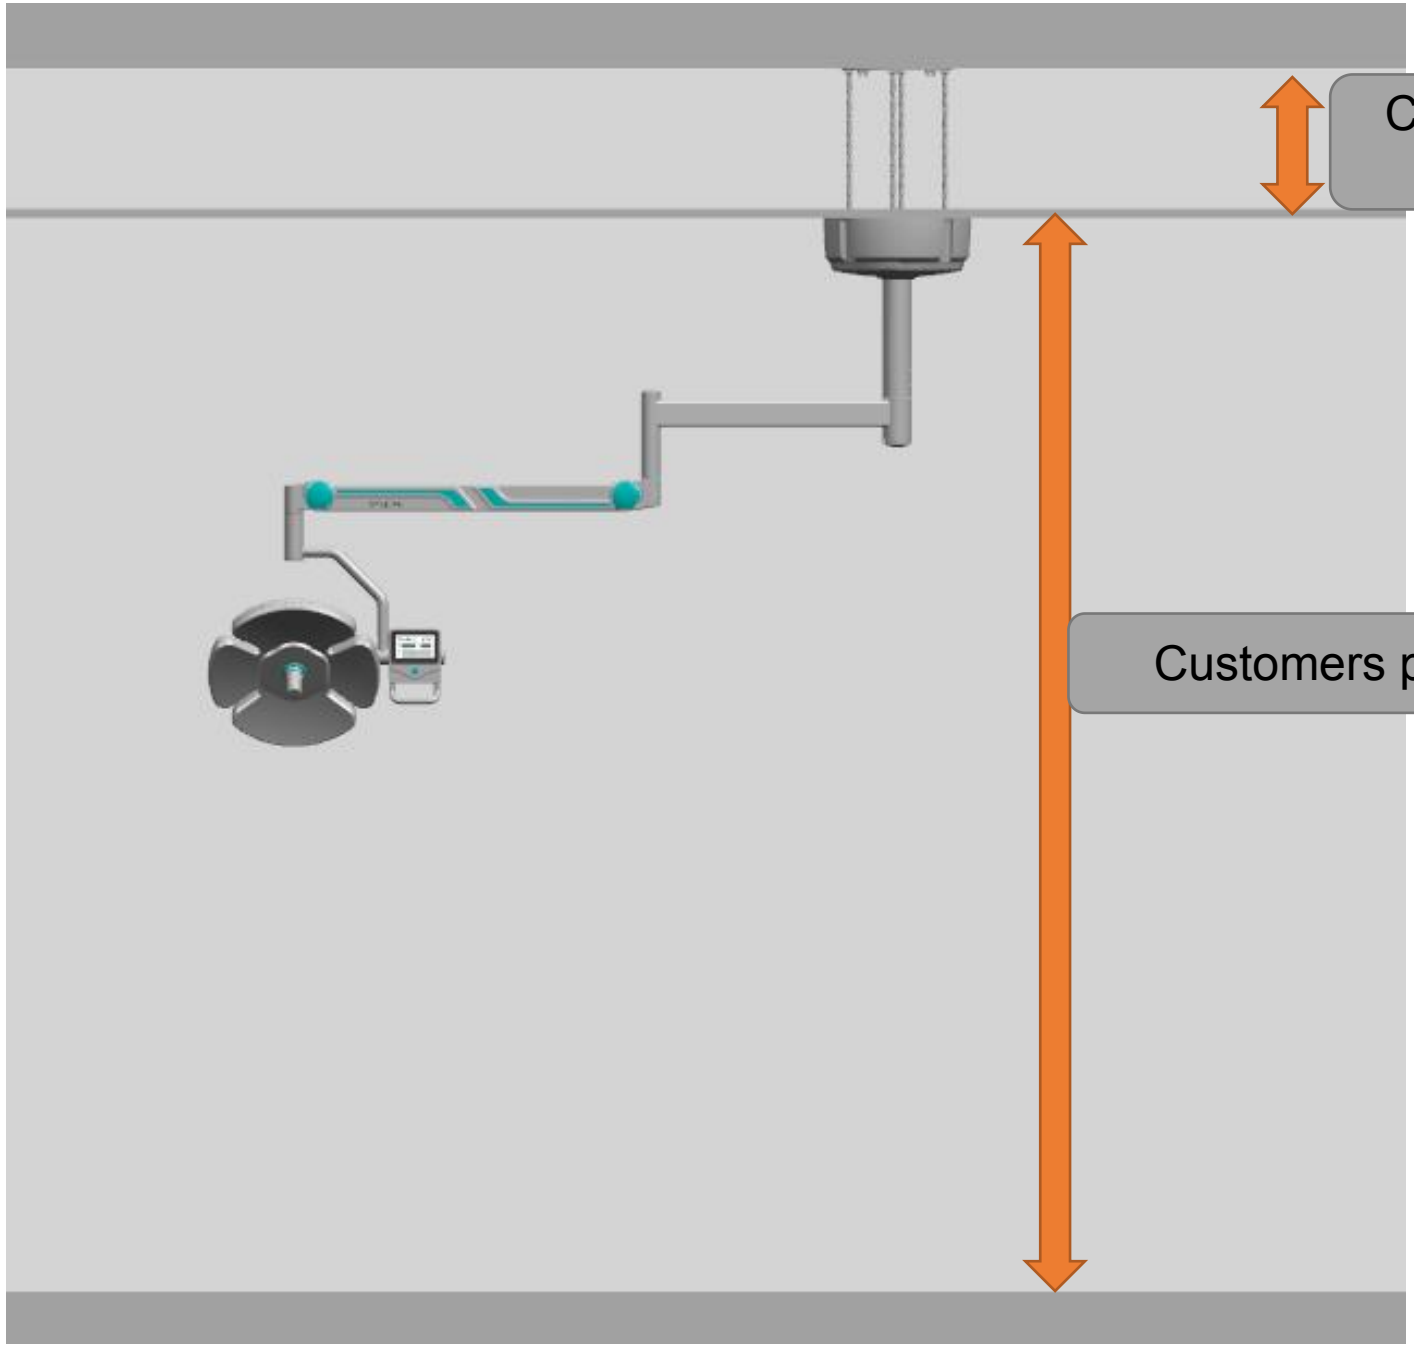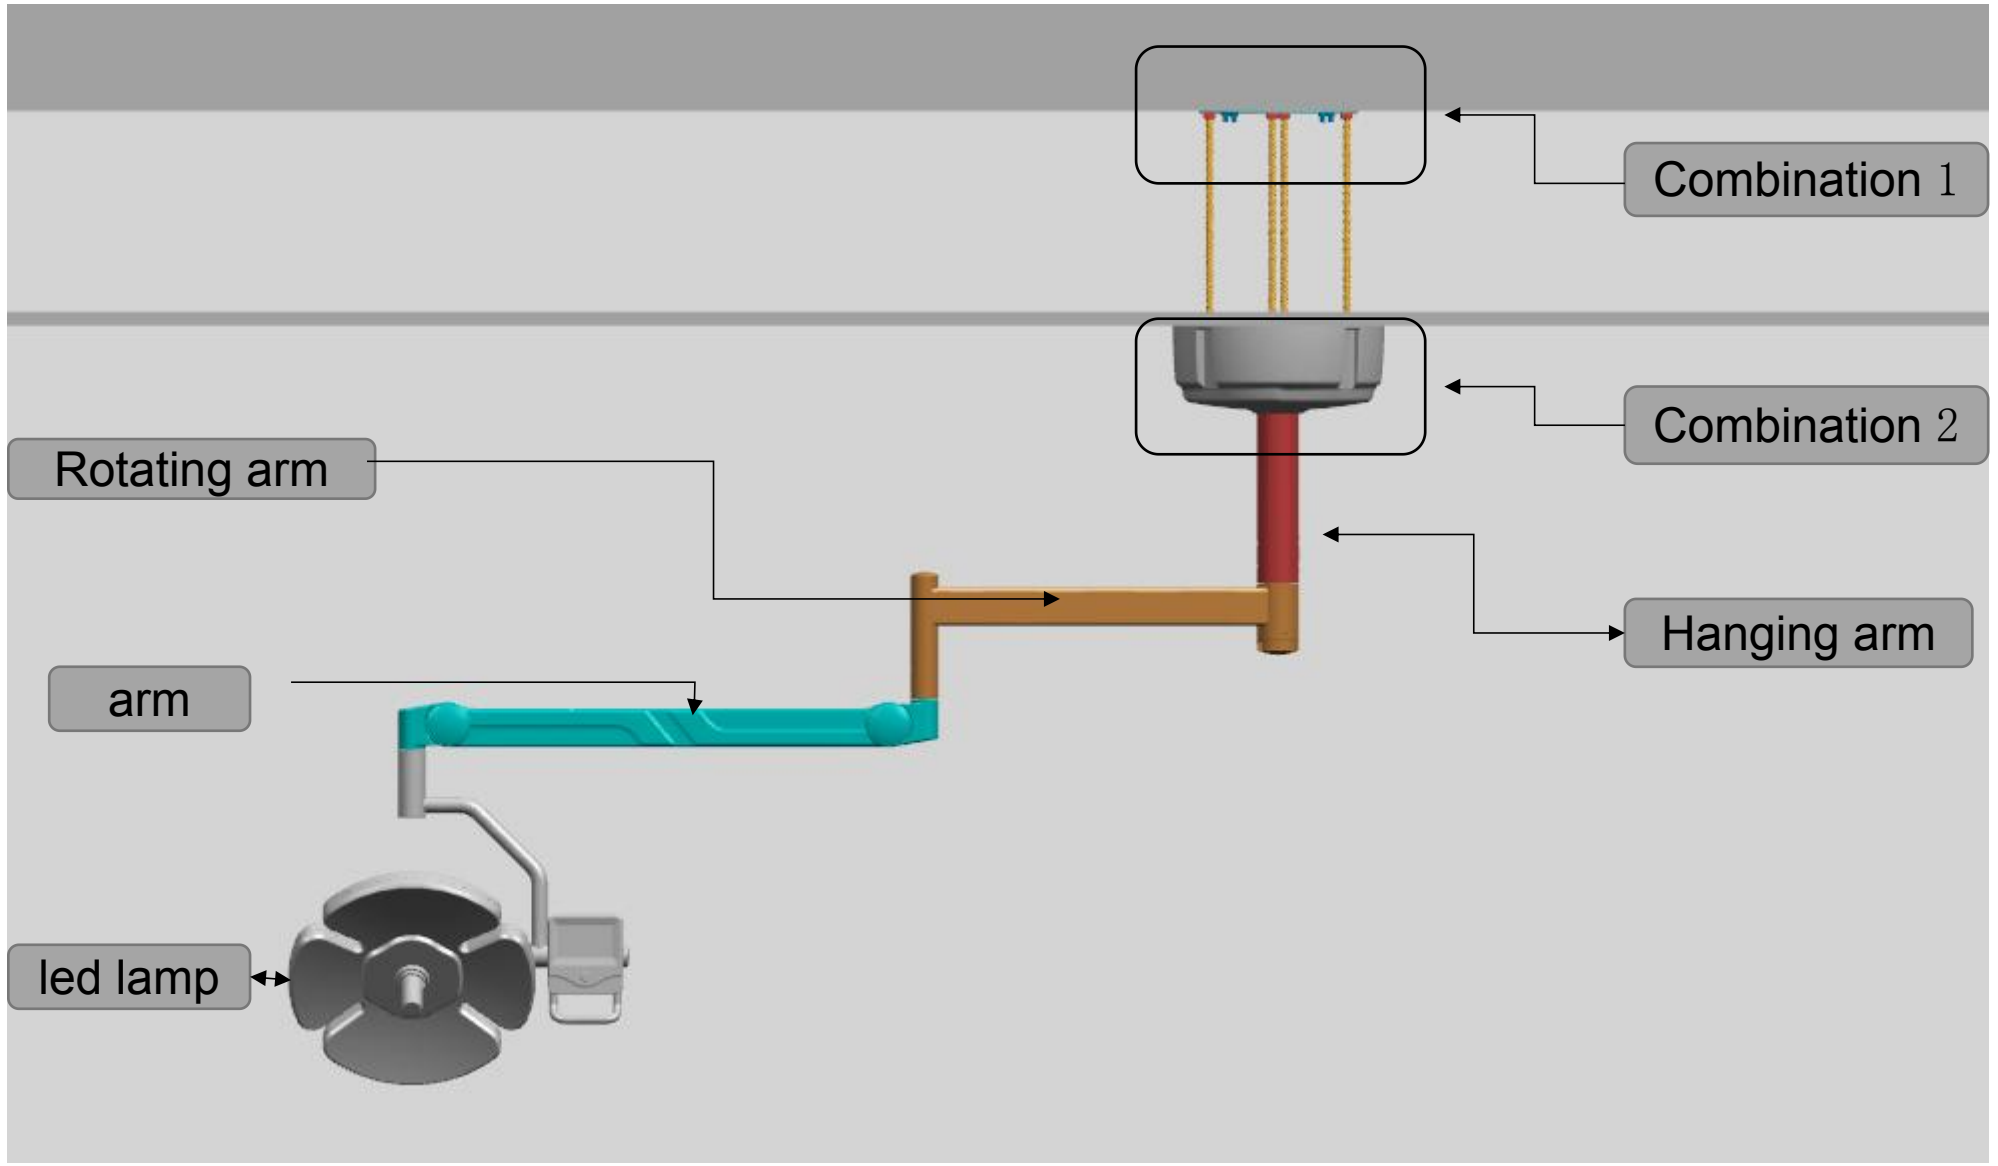


floor


Combination 1
Combination 2
Rotating arm
Hanging arm
arm
led lamp

Dentalzone


Combination 1

1：Pulls explodes the screws into the concrete

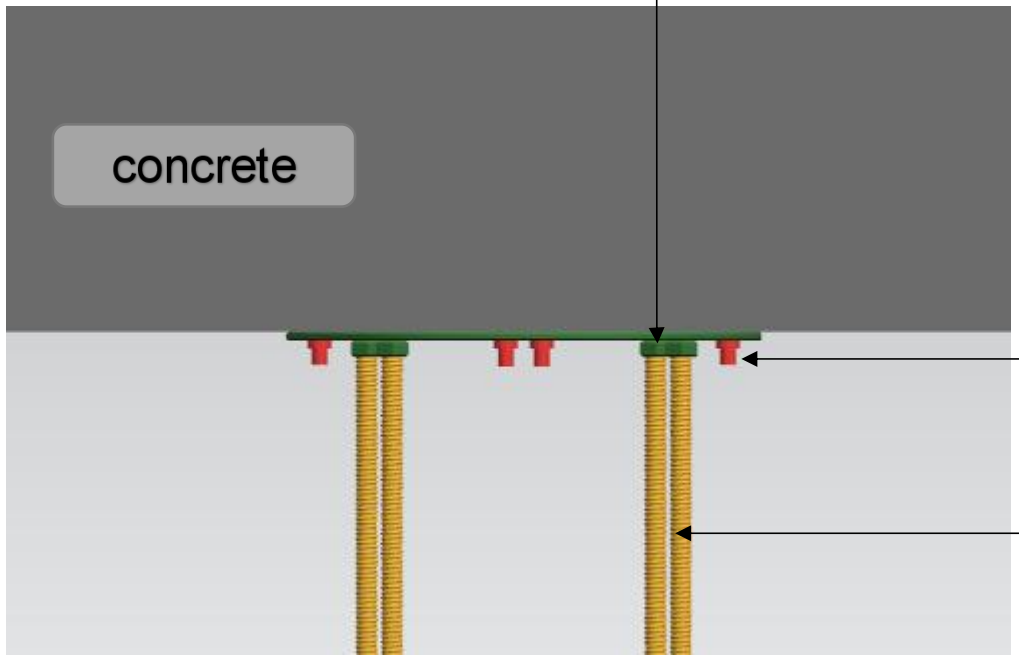



M10 expansion screws

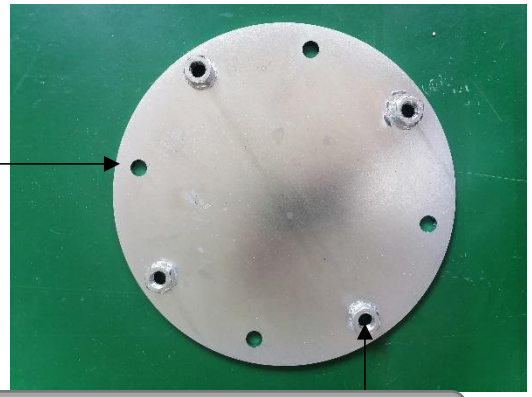

290mm bottom board

2：Install steeve




M14 steeve

Combination 2

Dentalzone


Electric power

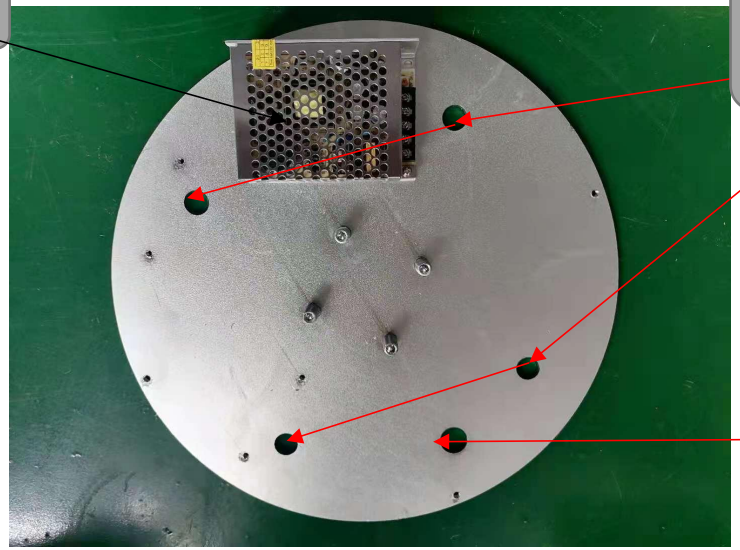


Put steeve into holes

Put wires into hole

ceiling

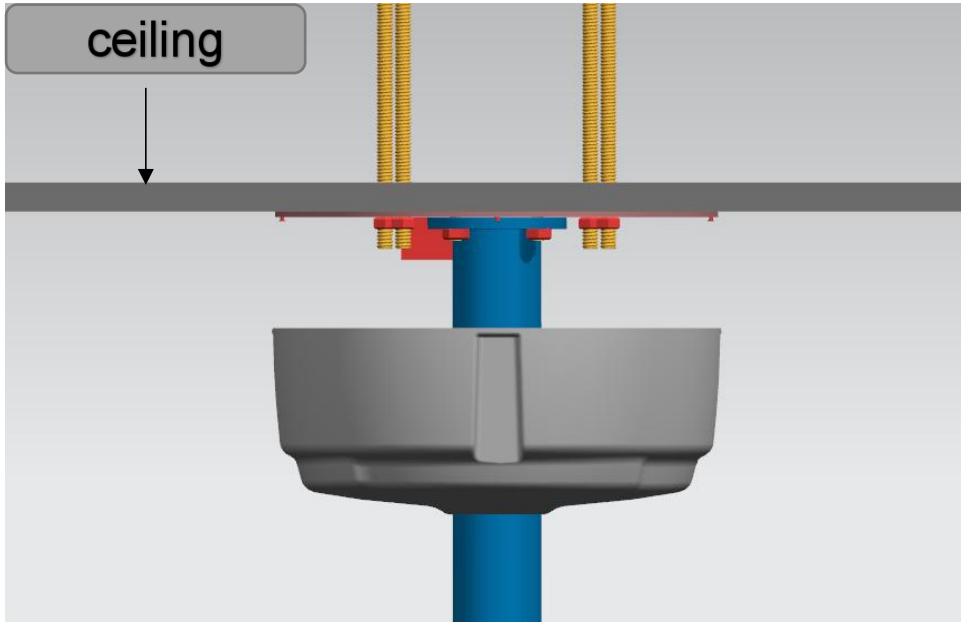


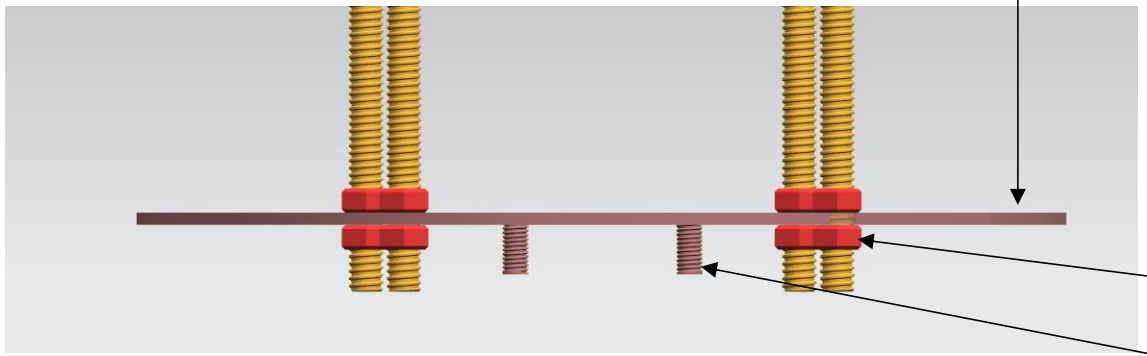

1：Make holes on the ceiling according to relevant positions

2：Use the strews of steeve to fix the disk, put the disk down , and then fix the screws


Dentalzone

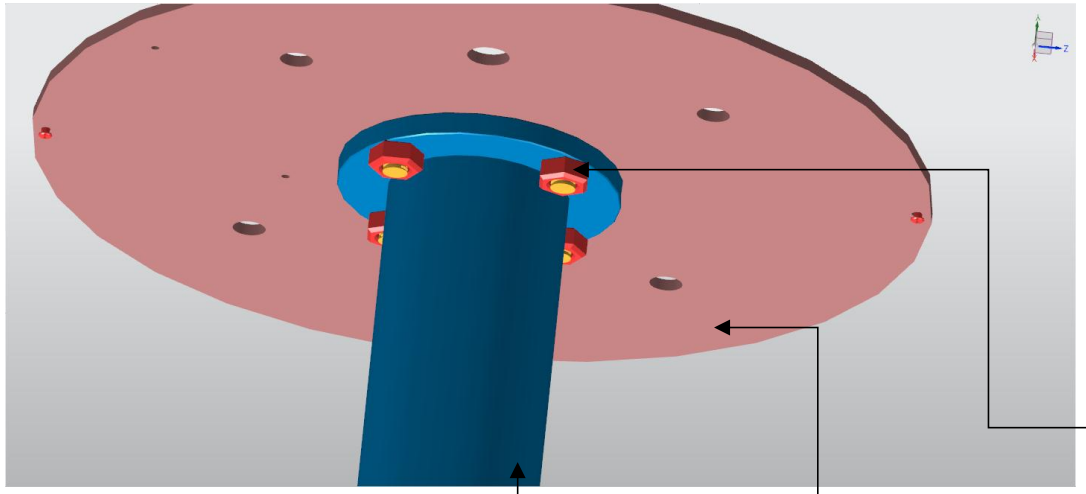


M10 screws



3：Use the screws to fix the hanging arm，and connect the power

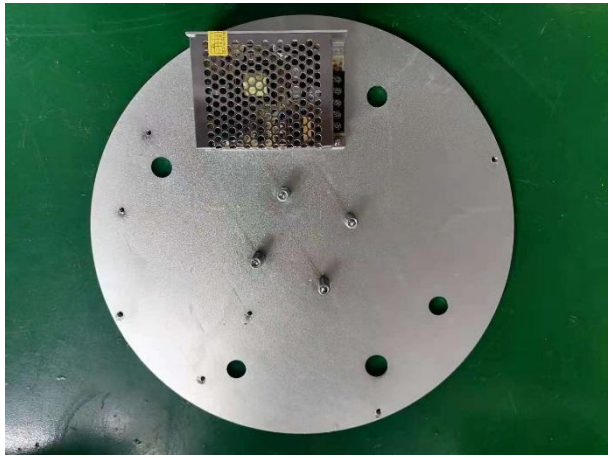



bottom board with power

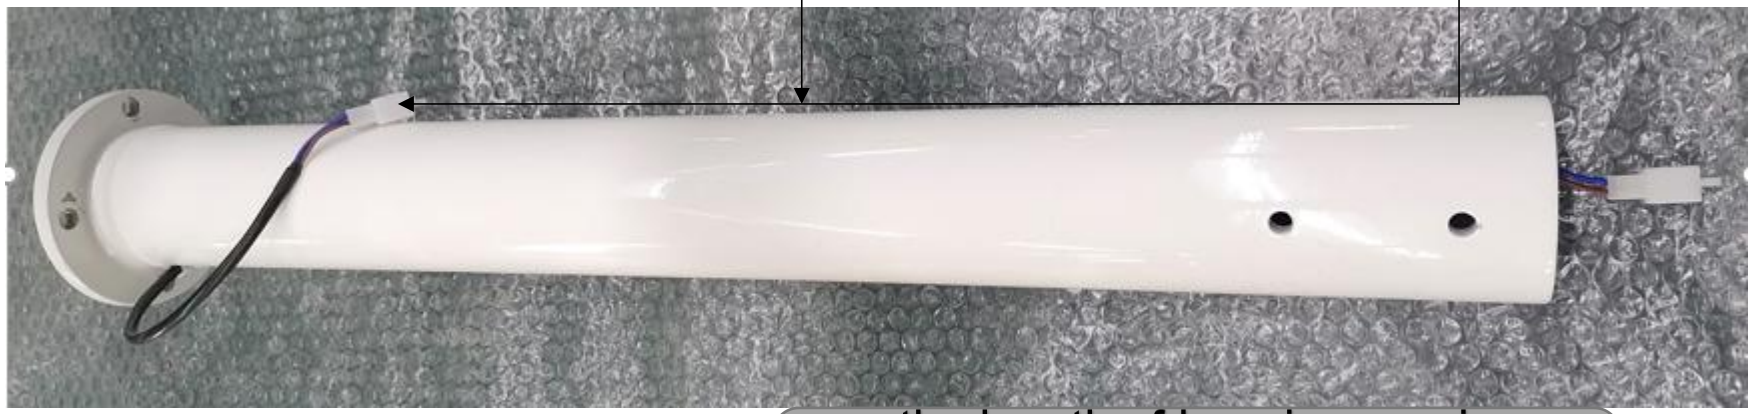


the length of hanging arm is customized accoring to the floor height


4：Use the screws to fix the disk

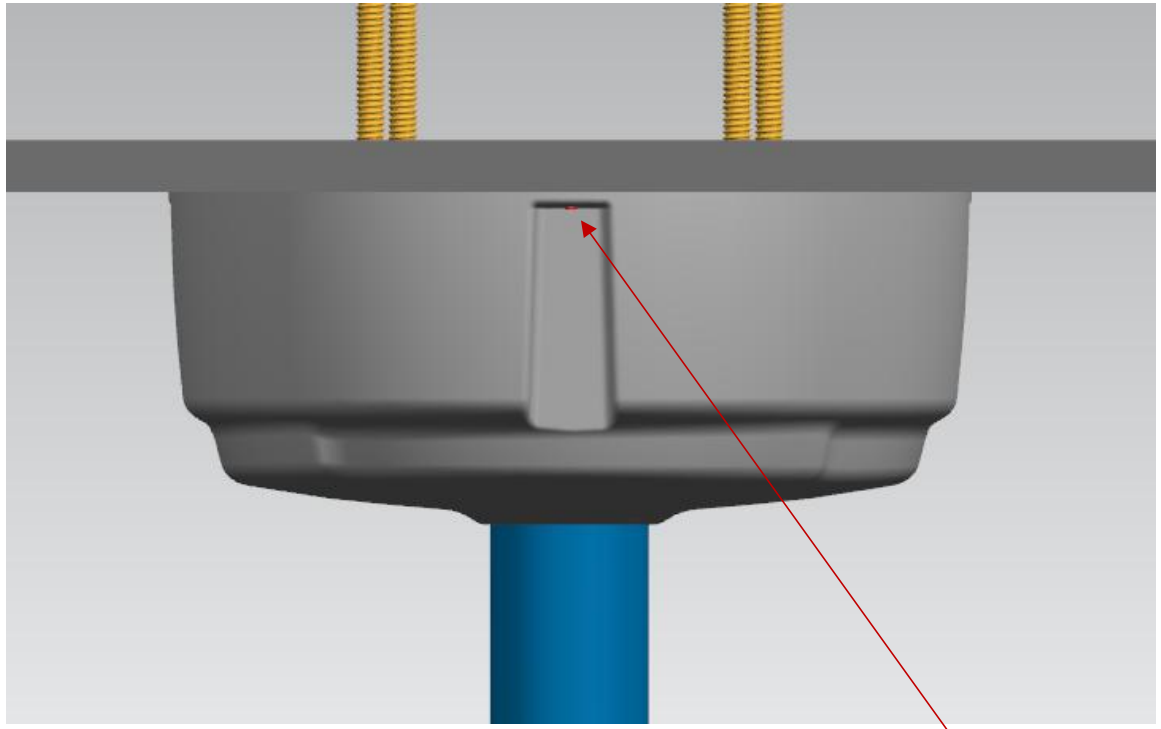

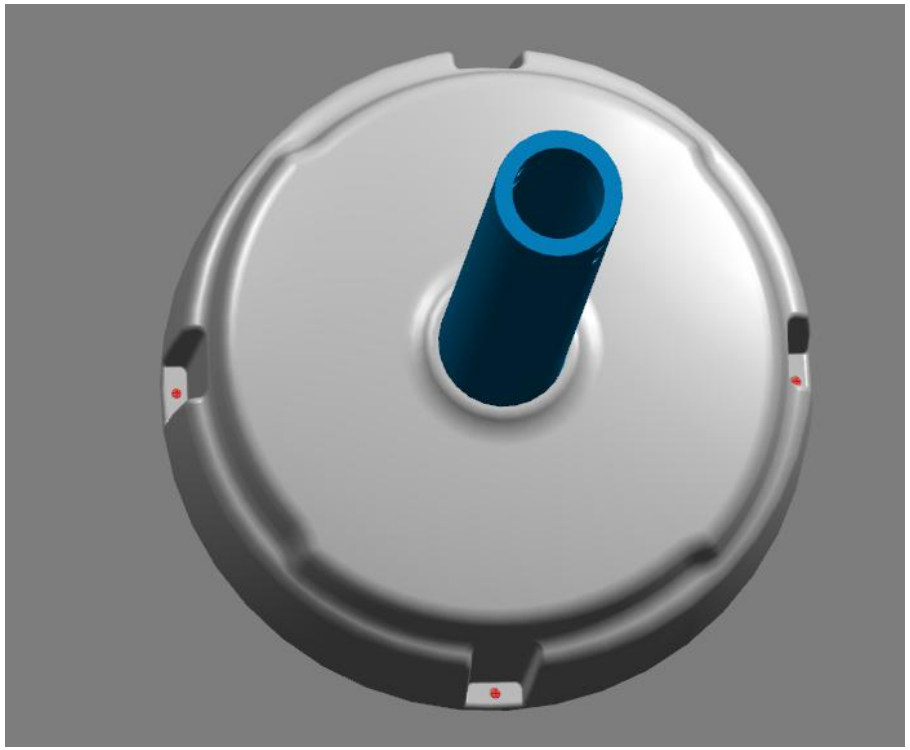



The fixed position for 4 screws

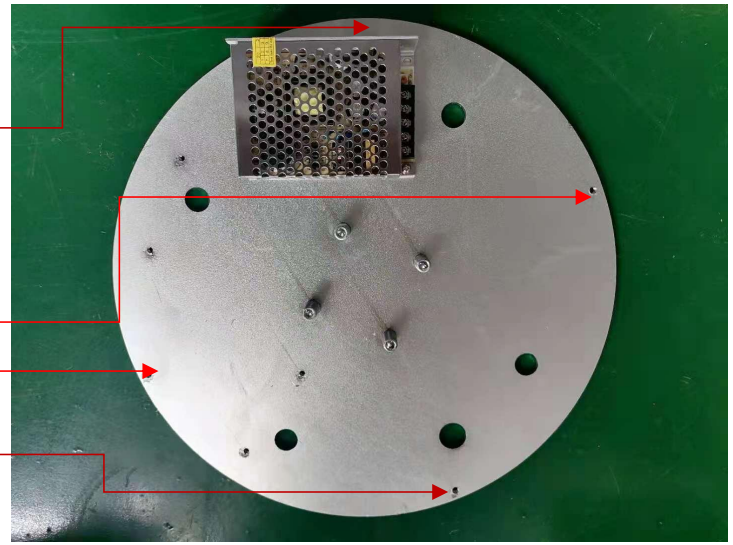

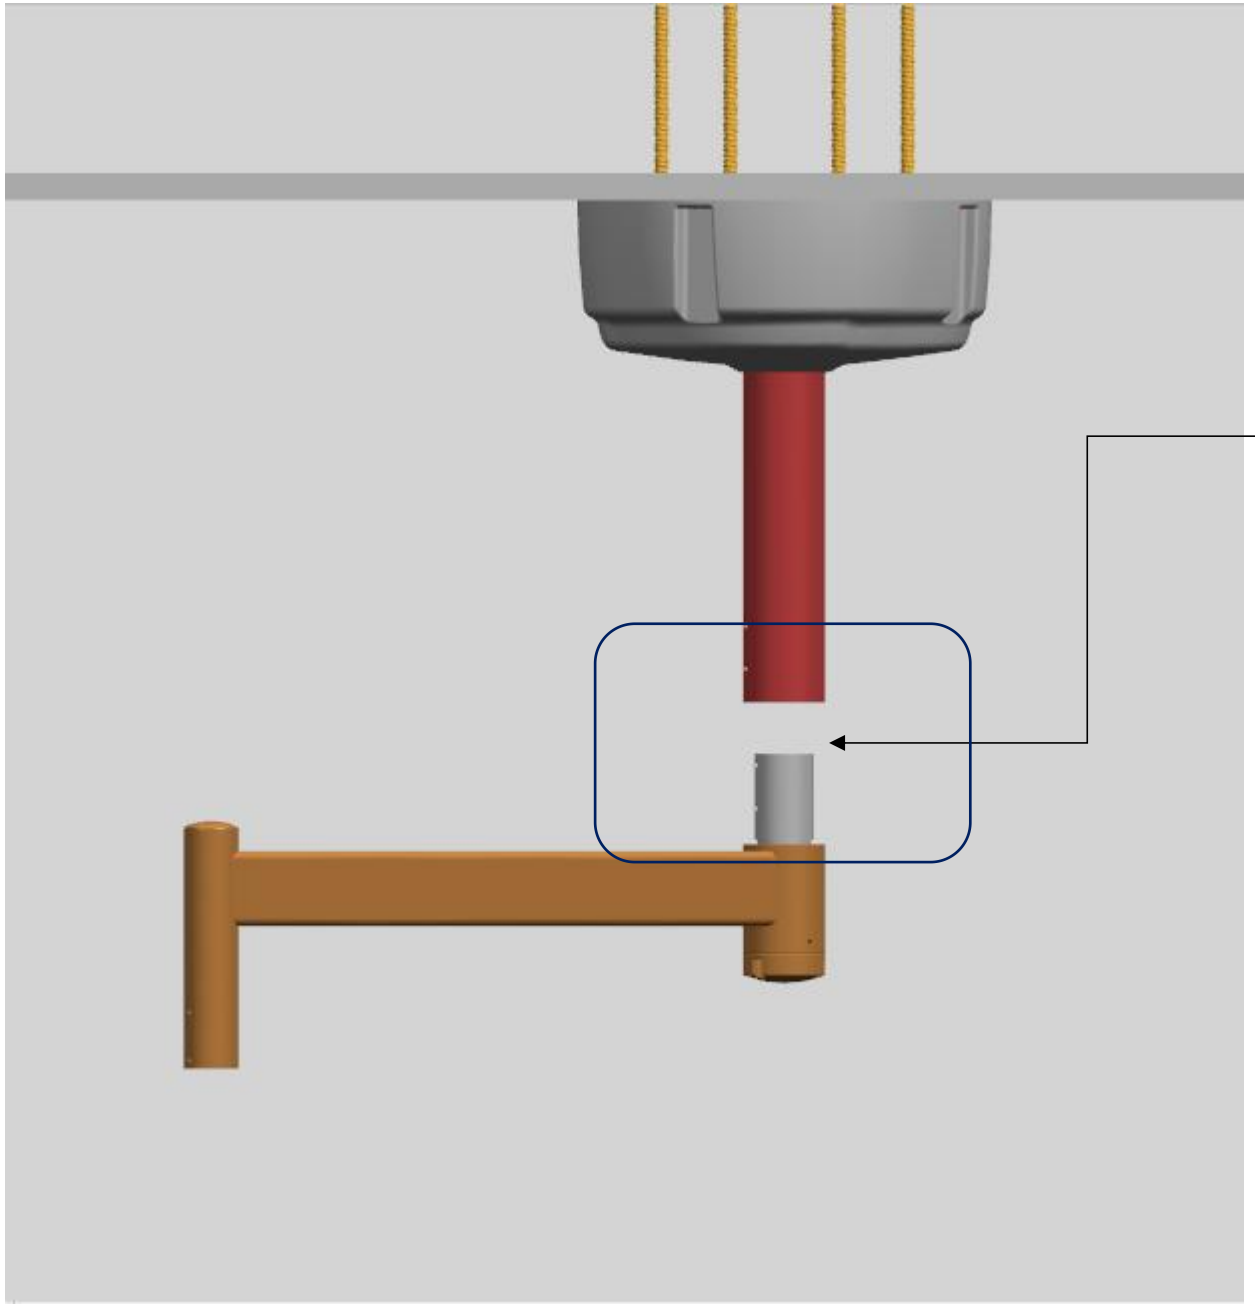

1：power line connection，connecting rotating arm with hanging arm，and then fix the 4 screws

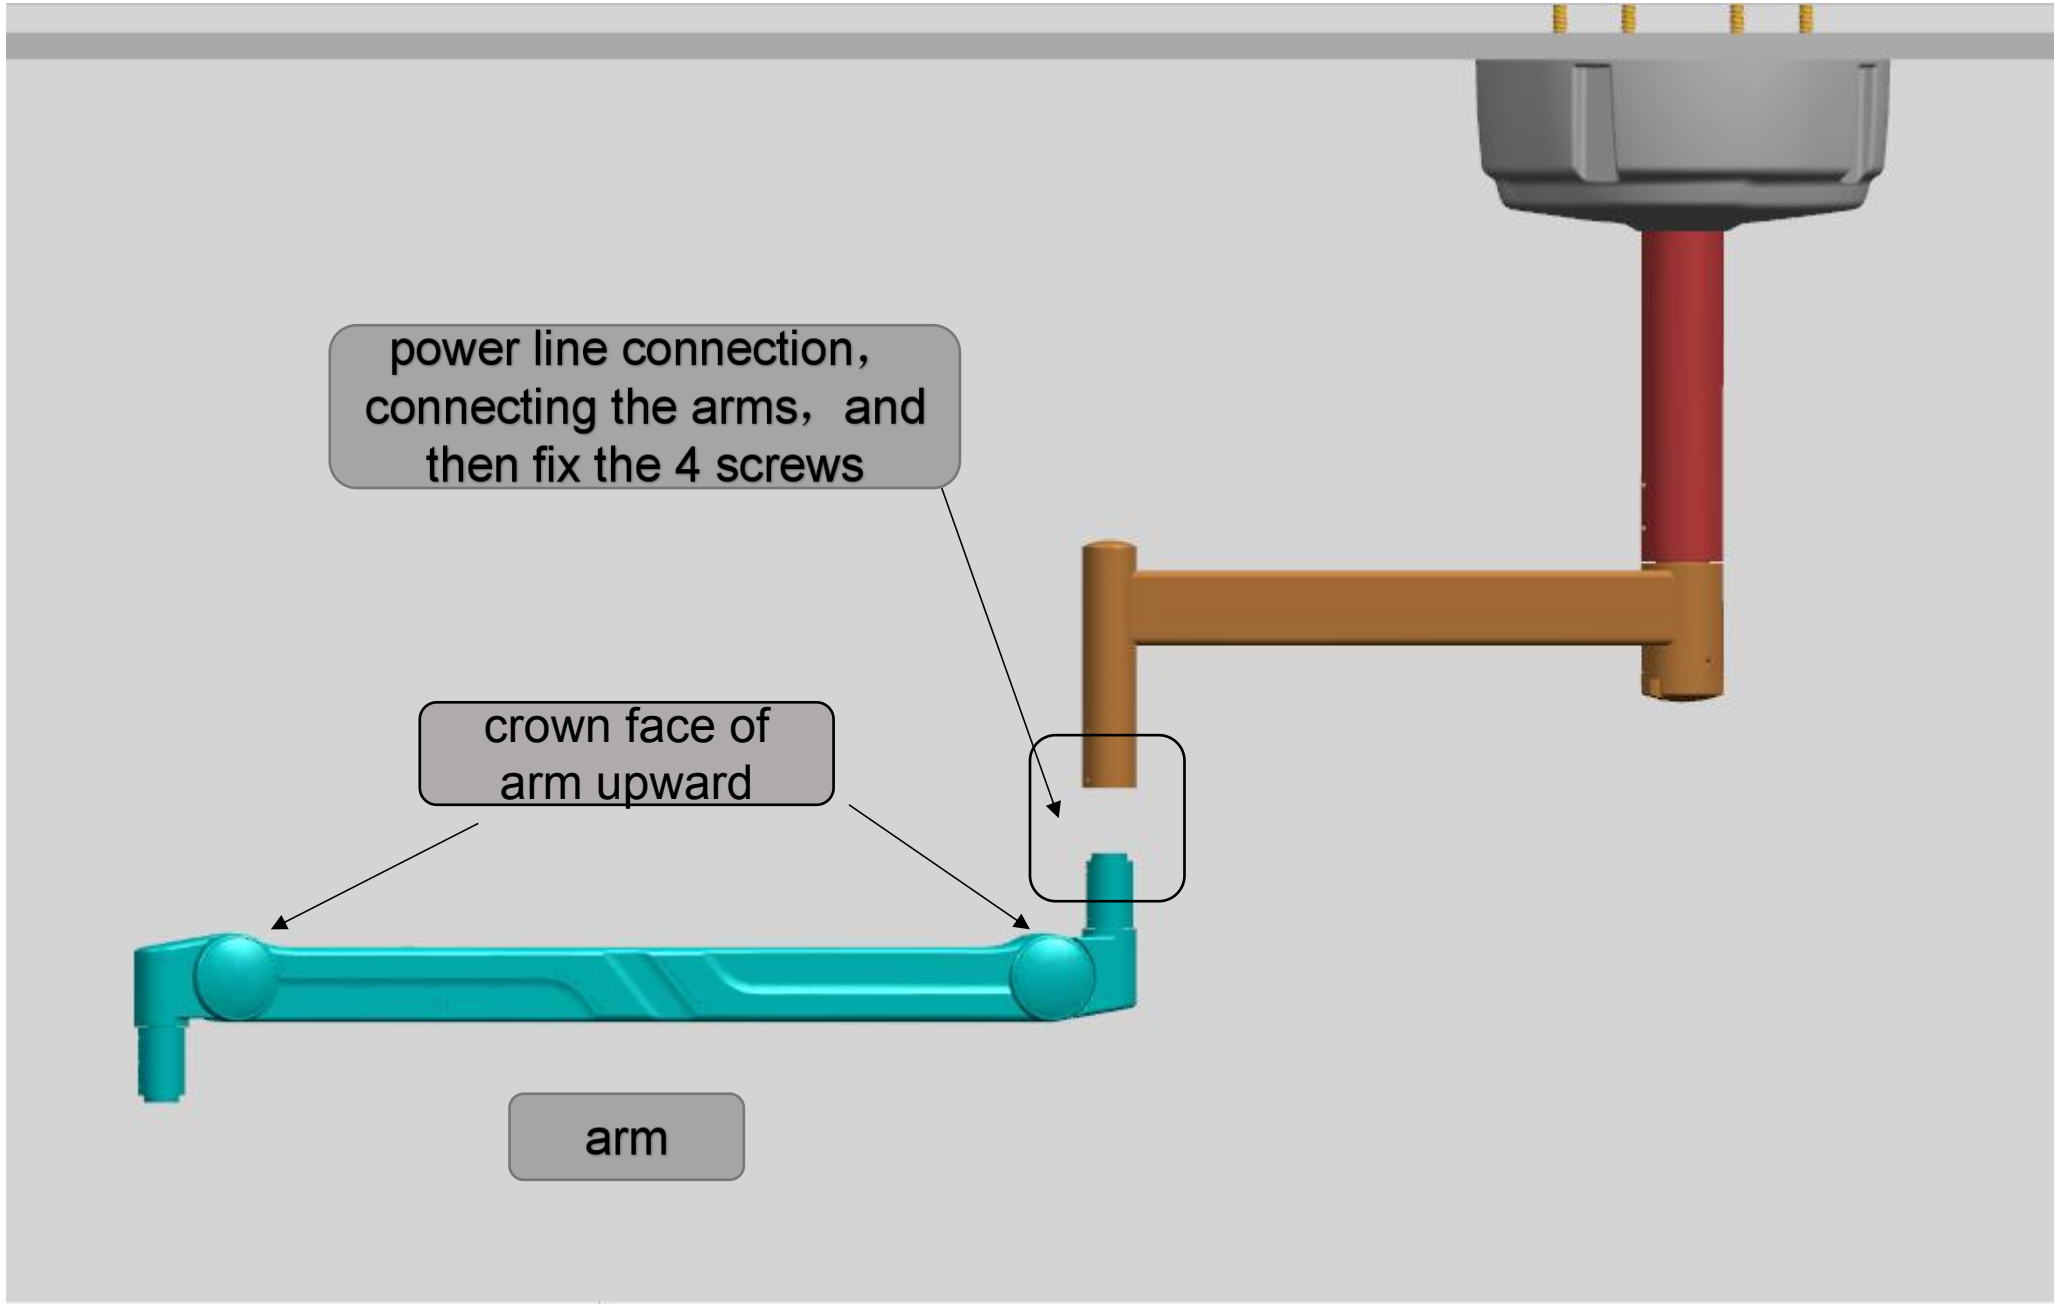
power line connection，
connecting the arms，and
then fix the 4 screws
crown face of
arm upward
arm

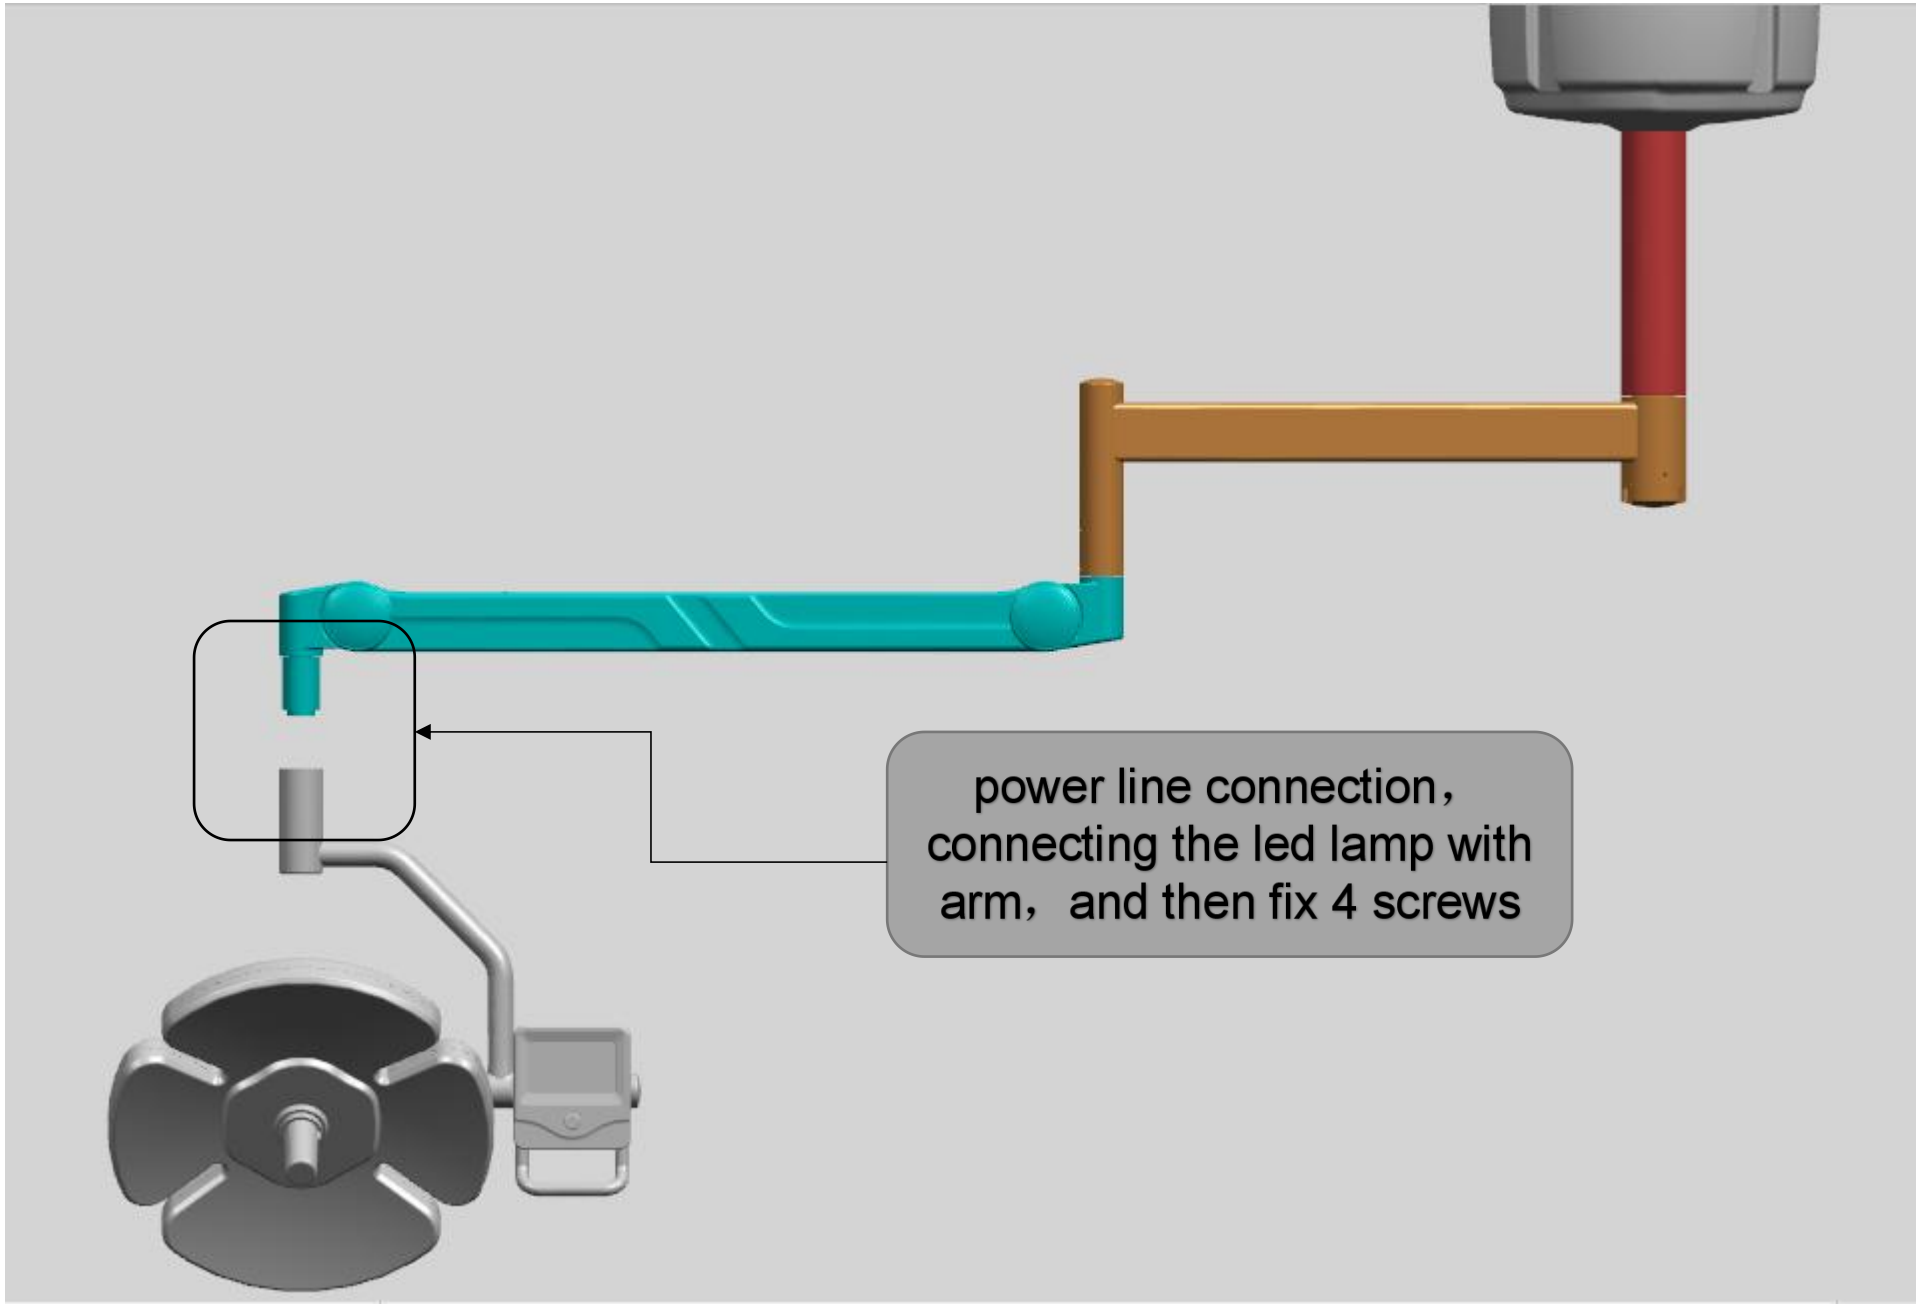
power line connection，
connecting the led lamp with
arm，and then fix 4 screws